IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquid.
4. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.

5. Keep the cord away from heated surfaces. Do not allow cord to contact heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
6. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord to operate appliance.
10. Surfaces of this appliance may be hot when in use. Do not let eyes or bare skin touch heated surfaces.
11. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.
12. Unplug this appliance before filling or emptying. Do not overfill.

13. While emitting steam, this appliance may cause burns if it is used too closely to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from steam vents, test appliance before each use by holding it away from body.

14. Do not operate steamer without properly filling the water container.
15. Always keep the hose and nozzle elevated above the water container.
16. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
17. Burns could occur from touching hot metal parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down – there may be hot water in reservoir.
18. To reduce likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
19. If an extension cord is absolutely necessary, a 15 ampere rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.
20. Never pour water directly into reservoir. Put water only in water tank.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

UNPACKING INSTRUCTIONS

Place the box on a large sturdy flat surface. Carefully remove the appliance from the packing material. Keep all plastic bags away from children.

STEAMER ASSEMBLY

STEP 1 - Assembling the Support Rod

1. The support rod comes in several parts: 3 metal rods, marked "1", "2", "3"; three plastic connectors, and one T-nozzle cradle.

2. Insert rod 1 into receptacle in base (fig. a).



Desensamblar el tubo (deje el aparato enfriar antes de desensamblarlo)

Para remover el tubo, gírelo lentamente en el sentido antihorario.

El tubo puede estar rígido cuando lo desempaque. Después de usarlo, se relajará y la boquilla en forma de T cabrá en el soporte.

3. Slide plastic connector onto rod 1 (fig. b).
4. Insert rod 2 into plastic connector (fig c).
5. Slide another plastic connector onto rod 2 (fig b). Insert rod 3 into plastic connector (fig c).
6. Slide T-nozzle cradle onto rod 3 (fig d).



STEP 2 - Attaching the Steamer Hose

Insert hose cap into steamer housing and twist clockwise to securely lock hose onto housing.

Etapa 2 – Ensamblar el tubo

Introduzca la extremidad del tubo en la base y gire en el sentido horario para sujetarlo.

Etapa 1 – Ensamblar el soporte

1. El soporte incluye varias partes: 3 barras de metal marcadas "1", "2" y "3", 3 juntas de plástico y un soporte para la boquilla en forma de T.

ENSAMBLADO

Etapa 1 – Ensamblar el soporte

1. El soporte incluye varias partes; 3 barras de metal marcadas "1", "2", y "3", 3 juntas de plástico y un soporte para la boquilla en forma de T.

DESEMPACADO

Coloque la caja en una superficie plana y estable y saque el aparato cuidadosamente. Mantenga las fundas de plástico lejos del alcance de los niños.

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

2. Inserte la barra de metal "1" en la base (Fig. a).
3. Instale una junta de plástico sobre la barra "1" (Fig. b).
4. Inserte la barra de metal "2" en la junta (Fig. c).
5. Instale otra junta de plástico sobre la barra "2" (Fig. b) e inserte la barra "3" en la junta (Fig. c)
6. Instale el soporte para la boquilla sobre la barra "3" (Fig. d).

Removing the Steamer Hose (make sure unit has cooled)

To remove, turn counterclockwise to release. Turn slowly.

Hose may be stiff upon removal from box. Hose will relax after initial use. T-handle will sit properly on pole support once hose is relaxed.

11. No coloca la boquilla en ninguna superficie mientras está caliente o mientras el aparato está enchufado. Manténgala alejada del cable eléctrico. Use el soporte incluido.
12. Desconecte el aparato antes de llenar o de vaciar el tanque. No sobrelleve el tanque.
13. El vapor puede causar quemaduras si se usa el aparato demasiado cerca del rostro o de la piel o si no usa el aparato de manera adecuada. Para reducir el riesgo de quemaduras, pruebe el aparato antes de cada uso, manteniendo la boquilla lejos del cuerpo.
14. No use el aparato con el tanque de agua vacío.
15. Siempre mantenga el tubo y la boquilla más alta que el tanque.
16. Nunca jale el cable para desconectar el aparato. Cójа el cable por la clavija.
17. Las partes de metal calientes, el agua caliente y el vapor pueden causar heridas. Tenga cuidado al remover el tanque de agua.
18. Para evitar los riesgos de sobrecarga eléctrica, no use otro aparato de alto vatiaje en el mismo circuito eléctrico.
19. Si debe usar el aparato con extensión, use una extensión de 15 amperios. Las que pueda sobrecalentar. Utilice el cable de manera que nadie lo pueda jalar o tropezar.
20. Nunca vierta agua directamente en el depósito de agua del aparato.

OPERATING INSTRUCTIONS

BEFORE FILLING THE WATER CONTAINER

Turn the water container upside down and inspect to make sure the valve and spring assembly are functioning. Place the container in the reservoir and check that it is seated securely. If the container has been stored with water inside, it may be necessary to remove the water and clean the container. Follow the steps for care and cleaning.

FILLING THE WATER CONTAINER (PRIOR TO PLUGGING IN THE APPLIANCE)

Remove the water container with the handle and turn upside down. Unscrew the valve in the center of the base. Fill container by holding container under a source of running cold water until the container is filled to the desired level. Do not overfill. Screw the valve cap onto the water container and return the container to the upright position. Place the water container onto the base and make certain it is seated properly in the cavity. **DO NOT FILL THE CONTAINER WITH HOT WATER.**

GETTING TO KNOW YOUR STEAMER

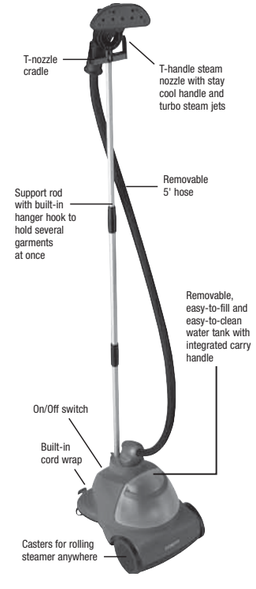
T-nozzle cradle
T-handle steam nozzle with stay cool handle and turbo steam jets
Removable 5' hose
Support rod with built-in hanger hook to hold several garments at once
Removable, easy-to-fill and easy-to-clean water tank with integrated carry handle
On/Off switch
Built-in cord wrap
Casters for rolling steamer anywhere

OPERATING THE STEAMER

1. Make sure the On/Off switch is in the off position.
2. Make sure all hose connections are secure and tight.
3. Make sure the rod is fully assembled and the hose is not twisted or kinked.
4. Plug the steamer cord into a normal electrical outlet.
5. Turn the On/Off switch to the on position.
6. The switch will light to indicate when power is on.
7. Steam will be produced from the nozzle in about one minute.

CAUTION: Hose will be hot when in use. Avoid prolonged contact.

MEDIDAS DE SEGURIDAD IMPORTANTES

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

PELIGRO — Cualquier electrodoméstico permanece electricamente activo, incluso cuando el interruptor está apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.
2. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
3. No coloque el aparato ni lo deje caer al agua u otro líquido.
4. Si el aparato cae al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:

1. Nunca deje este aparato desatendido mientras está conectado.

2. Se debe supervisar cuidadosamente el uso de este aparato cuando está utilizado por, sobre o cerca de niños o personas con alguna discapacidad.
3. Use este aparato únicamente con el propósito para el cual fue diseñado y tal como se describe en este manual. Sólo se recomiendan los accesorios que el fabricante.
4. Nunca utilice el aparato si el cable o la clavija están dañados, si no funciona correctamente, si ha caído, si está dañado o si la caída al agua. No intente reparar el aparato. Ensámblar las partes de manera incorrecta aumenta los riesgos de incendio, electrocución y lesiones al usar el aparato. Lleve el aparato donde lo ha comprado o a un centro de servicio autorizado para que lo examinen y lo reparen.
5. Mantenga el cable alejado de superficies calientes. No jale, retuerza ni enrolle el cable alrededor del aparato. Deje el aparato enfriar completamente antes de almacenarlo. Enrolle el cable alrededor de la base sin apretar.
6. Este aparato tiene una clavija polarizada (un polo es más ancho que otro). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entra por completo, invíertala. Si aún no entra completamente, llame a un electricista calificado. No intente vencer esta función de seguridad.
7. Nunca deje caer ni inserte un objeto en ninguna de las aberturas o en el tubo.
8. No lo utilice al aire libre, ni donde se estén usando productos en aerosol (spray) o donde se está administrando oxígeno.
9. No utilice este aparato con una extensión eléctrica.
10. La superficie de este aparato puede volverse caliente durante el uso. No toque las áreas calientes.

DESEMBALADO

Coloque la caja en una superficie plana y estable y saque el aparato cuidadosamente. Mantenga las fundas de plástico lejos del alcance de los niños.

Desensamblar el tubo (deje el aparato enfriar antes de desensamblarlo)

Para remover el tubo, gírelo lentamente en el sentido antihorario.

El tubo puede estar rígido cuando lo desempaque. Después de usarlo, se relajará y la boquilla en forma de T cabrá en el soporte.

INSTRUCCIONES DE USO

ANTES DE LLENAR EL TANQUE

Inspeccione el tanque para asegurarse que la válvula y el juego de resortes estén funcionando. Coloque el tanque en el depósito para asegurarse que cabe de manera segura. Si hay agua en el tanque, saque el agua y limpie el tanque tal como indicado en la sección "limpieza y mantenimiento".

LLENAR EL TANQUE

(ANTES DE CONECTAR EL APARATO)

Remueva el tanque usando el agarre de plástico. Vire el tanque. Remueva la válvula ubicada en el centro. Llene el tanque con agua fría hasta el nivel deseado. No lo sobrelleve. Vuelva a colocar la válvula y regrese el tanque en el depósito, asegurándose que está asentado correctamente. **NO LLENE EL TANQUE CON AGUA CALIENTE.**

OPERACIÓN

1. Asegúrese que el aparato está apagado (OFF).
2. Asegúrese que el tubo está correctamente instalado y sujetado.
3. Asegúrese que el soporte telescópico está instalado correctamente y que el tubo no está torcido.
4. Enchufe el cable eléctrico en una toma de corriente estándar.
5. Encienda el aparato (ON). Alumbrará para indicar que el aparato está encendido.
6. El botón de encendido/apagado se alumbrará para indicar que el aparato está aproximadamente 1 minuto.
7. El aparato empezará a producir vapor en aproximadamente 1 minuto.

OTRAS NOTAS IMPORTANTES

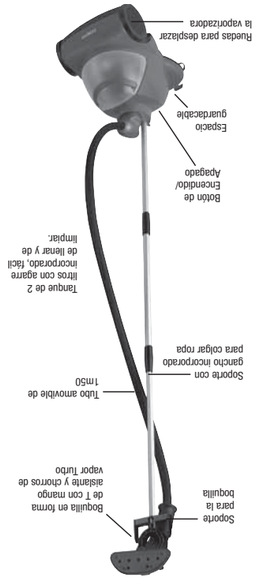
Soporte para la boquilla
Boquilla en forma de T con mango aislante y horcros de vapor Turbo
Tubo amovible de 1m50
Soporte con gancho incorporado para colgar ropa
Tanque de 2 litros con agarre incorporado, fácil de llenar y de limpiar.
Botón de Encendido/ Apagado
Espacio guardacable
Ruedas para desplazar la vaporizadora

CONOZCA SU VAPORIZADORA

VAPORIZADORA PARA TELA

¡Cómoda para ropa, cortinas & mantelería!

Manual de instrucciones

Para su seguridad y para seguir disfrutando de este producto durante años, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR®

Modelo GS7RW

CENTRO DE SERVICIO
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para información sobre cualquier producto de Conair, llame al 1-800-3-CONAIR o visite http://www.conair.com

©2006 Conair Corporation
East Windsor, NJ 08520, Glendale, AZ 85307

06PC2349

IB-7225

CLEANING AND STORING

1. Turn the On/Off switch to the off position and unplug from the power source.
2. Wait for the steamer to cool completely for at least 30 minutes.
3. Unplug power cord and gently wrap around built-in cord wrap.
4. Remove the steamer hose.
5. Remove the water container from unit, unscrew valve and empty unused contents. Allow to air dry.
6. Remove excess water from the reservoir by lifting the unit and pouring into a sink.
7. Replace water container.
8. Store the unit.

OTHER IMPORTANT NOTES

During operation, the steamer hose may gurgle. This is a normal result of condensation collecting inside the hose. Simply lift the T-handle upward until the hose is extended to its full height. The gurgling will disappear when the excess moisture inside the hose has had a chance to drain back into the base.

To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water container. Replace the water container in the unit. Plug the unit into electrical outlet. Turn to the on position and run until half the amount has steamed (1 liter). Turn the unit to the off position, unplug from electrical outlet, and allow to sit for 30 minutes. Remove water container.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place on a towel rack.

Heavier fabrics may require repeated steaming. Repeat as necessary.

With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.

Do not directly touch velvet or silk with the steam head.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, if the steamer stops producing steam and then starts again, or if the low-water indicator lamp illuminates even with water container full, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits which form over time on the metal parts of the steamer. For best performance from your Conair® Fabric Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water container. Replace the water container in the unit. Plug the unit into electrical outlet. Turn to the on position and run until half the amount has steamed (1 liter). Turn the unit to the off position, unplug from electrical outlet, and allow to sit for 30 minutes. Remove water container.

Remove excess water from the reservoir by lifting the unit, inverting and pouring the unit over sink, and allowing water to drain from internal reservoir. Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2-3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification, before using the unit again to steam garments.

TO STEAM DRAPES

Grasp the T-handle steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

HOW TO STEAM

Grasp the T-handle steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

NOTE: Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

Wash and dry drapes as directed according to fabric type. Re-hang drapes and steam drapes when in place.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer.

If you steam with hose not upright, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the T-handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

Siempre mantenga la boquilla recta y alta. Esto permitirá que la condensación baje hacia el tanque.

Si mantiene la boquilla baja, la condensación se acumulará en el tubo. Esto causará gorgoteo y formará gotas en la boquilla, las cuales pueden mojar la ropa. Para evitar que esto ocurra mantenga la boquilla alta y el tubo extendido.

CÓMO DESARRUGAR CORTINAS

Lave y seque las cortinas según las instrucciones del fabricante. Cuelgue las cortinas y aplique vapor una vez que estén en su lugar.

TROUBLESHOOTING

- PROBLEM - Steamer fails to heat
  CAUSE - Steamer not plugged in
  SOLUTION - Plug into electrical outlet
- PROBLEM - No steam
  CAUSE - Water level is low
  SOLUTION - Turn On/Off switch off and refill water container
- PROBLEM - Water drips from nozzle
  CAUSE - Condensation in hose
  SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Nozzle gurgles
  CAUSE - Condensation in hose
  SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Poor steam performance
  CAUSE - Sediment in container
  SOLUTION - Decalcify reservoir and water container

LIMITED ONE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Note: Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

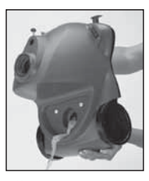

NOTA: Haga una prueba de color en un área discreta de la tela antes de desarrugar. Se le hará más fácil desarrugar toallas, servilletas y manteles colgándolos en una barra.

Telas más densas pueden necesitar más trabajo. Aplique vapor cuantas veces sea necesario.

Con práctica, desarrugar telas se volverá más fácil y más rápido y usted sabrá cual telas necesitan más de una aplicación.

No deje que la boquilla toque seda o terciopelo directamente.

CÓMO DESARRUGAR TELAS

Mantenga la boquilla en forma de T con los orificios frente a la ropa. Mueva la boquilla lentamente desde abajo hacia arriba, por dentro y por fuera (algunos tejidos responden mejor cuando se aplica vapor por dentro). Termine alejando la boquilla mientras alisa la ropa con su mano libre. Esto relajará las fibras y eliminará las arrugas.

LIMPIEZA DE LA CAL

Si el aparato produce menos vapor o deja de producir vapor y luego empieza otra vez, o si el indicador de agua baja se enciende mientras queda agua en el tanque, debería limpiar la cal acumulada en el aparato. Se trata de eliminar los depósitos de calcio que se encuentran en las partes metálicas del aparato.

Para resultados óptimos, le recomendamos que limpie la cal regularmente. La frecuencia de la limpieza dependerá de la dureza del agua local y de cuanto se usa el aparato.

Mezcle 1/3 de vinagre blanco con 2/3 de agua. Vierta la mezcla en el tanque. Coloque el tanque en el depósito y encienda el aparato. Espere hasta que la mitad del líquido (1 litro) haya desaparecido. Apague y desconecte el aparato. Déjelo enfriar durante 30 minutos, luego vacíe el líquido remanente en el tanque y en el depósito. Repita estos pasos 2 o 3 veces hasta que el vapor regrese a lo normal. Cada vez, use una mezcla nueva de vinagre con agua. Antes de volver a usar el aparato para desarrugar telas, repita estos pasos con un tanque de agua fresca.

El tubo puede gorgotear durante el uso. Esto es un resultado normal de la condensación acumulada en el tubo. Para corregir, levante la boquilla hasta extender el tubo completamente. El gorgoteo desaparecerá cuando el agua haya bajado hasta el tanque.

LIMPIEZA Y MANTENIMIENTO

1. Apague (OFF) y desconecte el aparato.
2. Deje el aparato enfriar durante por lo menos 30 minutos.
3. Desconecte el cable en enróllelo alrededor de la base.
4. Desconecte el tubo.
5. Saque el tanque, abra la válvula y vacíe el agua remanente. Deje el tanque secar al aire libre.
6. Vacíe el agua que quedó en el depósito.
7. Regrese el tanque en el depósito.
8. Almacene el aparato.

PRECAUCIÓN: El tubo se volverá caliente. Evite tocarlo.

RESOLUCIÓN DE PROBLEMAS

- PROBLEMA - El aparato no calienta
  CAUSA - El aparato no esta enchufado
  SOLUCIÓN - Enchufe el cable en una toma de corriente
- PROBLEMA - El aparato no produce vapor
  CAUSA - El nivel de agua está bajo
  SOLUCIÓN - Apague el aparato (OFF) y llene el tanque
- PROBLEM - Gotas de agua caen de la boquilla
  CAUSA - Condensación en el tubo
  SOLUCIÓN - Mantenga la boquilla alta y recta para que el agua baje hacia el tanque
- PROBLEMA - La boquilla burbujeav
  CAUSA - Condensación en el tubo
  SOLUCIÓN - Hold the hose vertically and allow water to drain back into unit
- PROBLEMA - El aparato produce poco vapor
  CAUSA - Depósitos de calcio
  SOLUCIÓN - Limpie la cal presente en el tanque y en el depósito

Nota: Según donde vive, el agua local contendrá más o menos minerales. Para un funcionamiento óptimo, siempre limpie el aparato y vacíe el agua remanente en el tanque y en el depósito antes de almacenarlo.

GARANTÍA LIMITADA POR UN AÑO

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio más cercano, junto con su recibo de compra y un cheque de $3,00US por gastos de envío y de manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Model GS7RW

IB-7225

06PC2349

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

For information on any Conair products call:
1-800-3-CONAIR or visit us on the web at http://www.conair.com

©2006 Conair Corporation
East Windsor, NJ 08520
Glendale, AZ 85307

CONAIR®

Convenient to Use on Clothes, Drapes & Linens!

FABRIC STEAMER

Instructions for Use

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.